

Vibrating Remote Kegel Exerciser

To use independently:

1. Press button once to turn on.
2. Press button repeatedly until the desired function is reached.
3. Hold button for 1-2 seconds to turn off.

To use with remote:

1. To turn on, press and hold middle button for 1-2 seconds.
2. Press the top or bottom buttons to cycle forwards and backwards through functions.
3. Press and hold the top button to increase speed on selected function. To decrease speed on selected function, press and hold bottom button.
4. To turn off, repeat step 1.

Vibrating G-Wand

1. To unlock, press and hold top button for 1-2 seconds.
2. To turn on, press top button once.
3. Press bottom button repeatedly until desired function is reached.
4. To turn off, repeat step 2.
5. To lock, repeat step 1.

Vibrating Ultimate Wand

1. To unlock, press and hold top button for 1-2 seconds.
2. To turn on, press top button once.
3. Press bottom button repeatedly until desired function is reached.
4. To turn off, repeat step 2.
5. To lock, repeat step 1.

Flickering Intimate Arouser

1. To turn on, press and hold bottom button for 1-2 seconds.
2. Press top button repeatedly until the desired function is reached.
3. To turn off, repeat step 1.

Pulsing Intimate Arouser

1. To turn on, press and hold bottom button for 1-2 seconds.
2. Press top button repeatedly until the desired function is reached.
3. To turn off, repeat step 1.

Vibrating Remote Breast Massager

To use independently:

1. Press button once to turn on.
2. Press button repeatedly until the desired function is reached.
3. To turn off, press and hold button for 1-2 seconds.

To use with remote:

1. Press button on massager once to turn on.
2. Press on/off button on remote to turn on and connect to massager.
3. Press middle button repeatedly until desired function is reached.
4. Press "+" button to increase speed on selected function. To decrease speed on selected function, press "-" button.
5. To turn off, press on/off button on remote once.

Vibrating Remote Intimate Teaser

To use independently:

1. Press button once to turn on.
2. Press button repeatedly until the desired function is reached.
3. To turn off, press and hold button for 1-2 seconds.

To use with remote:

1. Press button on massager once to turn on.
2. Press on/off button on remote to turn on and connect to massager.
3. Press middle button repeatedly until desired function is reached.

4. Press "+" button to increase speed on selected function. To decrease speed on selected function, press "-" button.
5. To turn off, press on/off button on remote once.

Style	Initial Charge Time	Run Time on High	Run Time on Low
Vibrating Remote Kegel Exerciser	2.5 hours	30 minutes	1.5 hours
Vibrating G-Wand	2.5 hours	40 minutes	3.5 hours
Vibrating Ultimate Wand	2.5 hours	1.5 hours	3 hours
Flickering Intimate Arouser	4 hours	1 hour	1.5 hours
Pulsing Intimate Arouser	5 hours	2 hour	1.5 hours
Vibrating Remote Breast Massager	3 hours	2 hours	3 hours
Vibrating Remote Intimate Teaser	2 hours	1 hour	2 hours

California Exotic Novelties, LLC, declares that the following device complies with essential requirements and further relevant regulations of the 1995/5/EG guideline:

Remote Control Toy

CEN No. SE-4807-50-3, SE-4810-05-3, SE-4810-50-3

A complete declaration of conformity can be obtained at: www.calexotics.com/certificates.aspx

CE 0678, 2200

"Hereby, California Exotic Novelties declares that this Remote Control Toy is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC."

