

## Silhouette™ Operating Instructions

### S1/S2/S8

1. This product comes with a travel lock feature. To unlock the product, press the button rapidly 3 times. Note: Product will automatically lock when removed from charger.
2. Press and hold down the button until the desired speed is reached.
3. To stop the vibrations, simply press the button once.
4. To lock the product, repeat step 1.

### S4

To use bullet independently:

1. Press and hold the power button on the bullet for 2-3 seconds to turn on. A white LED will turn on.
2. Press the button to change functions. Continue to press the button until the desired function is reached.
3. Rapidly press the power button twice to turn on the heating element. A red LED will turn on. To turn off, rapidly press the power button twice again. The heating element can be turned on and off at any time during use.

To use bullet with remote control:

1. Turn on the bullet (see instructions above) and heating element (if desired).
2. Press the button on the remote to change functions. Continue to press the button until the desired function is reached.
3. To turn off, press and hold the button on the remote for 2-3 seconds.
4. The bullet can be used independently at any time, even during use with the remote control.

### S3/S9/S10

1. This product comes with a travel lock feature. To unlock the product, press and hold down both buttons for 1-2 seconds. Both LED lights will turn on once unlocked. Note: Product will automatically lock when removed from charger.
2. Press the top button once to turn on the vibrations.
3. Press the bottom button to change functions. Continue to press this button until the desired function is reached.
4. Press and hold the bottom button to increase the speed of the chosen function.
5. To decrease the speed of the chosen function, press and hold the top button.
6. The chosen function can be changed (without affecting the speed) at any time by repeating step 3.
7. To stop the vibrations, press the top button once.
8. To lock the product, repeat step 1.

### S5

1. This product comes with a travel lock feature. To unlock the product, press and hold down both buttons for 1-2 seconds. Both LED lights will turn on once unlocked. Note: Product will automatically lock when removed from charger.
2. Press the button closest to the inside once to turn on the vibrations.
3. Press the button closest to the outside to change functions. Continue to press this button until the desired function is reached.
4. Press and hold the outside button to increase the speed of the chosen function.
5. To decrease the speed of the chosen function, press and hold the inside button.
6. The chosen function can be changed (without affecting the speed) at any time by repeating step 3.
7. To stop the vibrations, press the inside button once.
8. To lock the product, repeat step 1.

### S12/S13

1. To turn on, press and hold the power button for 2-3 seconds.
2. Press the button repeatedly to change functions. Continue to press the button until the desired function is reached.
3. To turn off, repeat step 1.

### S15/S16/S17

1. This product comes with a travel lock feature. To unlock the product, press and hold down both buttons for 1-2 seconds.
2. Press the bottom button once to turn on the product.

3. Press the top button to change functions. Continue to press this button until the desired function is reached.
4. Press and hold the top button to increase the speed of the chosen function.
5. To decrease the speed of the chosen function, press and hold the bottom button.
6. To turn stop the vibrations and turn off the product, press the bottom button once.
7. To lock the product, repeat step 1.

S19

1. This product comes with a travel lock feature. To unlock the product, press and hold down both buttons for 1-2 seconds.  
Note: Product will automatically lock when removed from charger.
2. Press and hold the top button for 3 seconds to activate the dual motors in the shaft. Continue to press this button until the desired function is reached.
3. Press and hold the bottom button for 3 seconds to activate the third motor in the stimulator. Continue to press this button until the desired function is reached.
4. To stop only the vibrations in the shaft, repeat step 2.
5. To stop only the vibrations in the stimulator, repeat step 3.
6. To stop the all vibrations, press both buttons together once.
7. To lock the product, repeat step 1.

\*\*\*All Silhouette™ items come with a one year warranty.

Charging and Run Time Information

Silhouette Style	Initial Charging Time	Run Time On High	Run Time On Low
S1	2.5 Hours	40 Min	105 Min
S2	2.5 Hours	25 Min	50 Min
S3	2.5 Hours	30 Min	2.5 Hours
S4	2 Hours	80 Min	4 Hours
S5	2.5 Hours	50 Min	3.5 Hours
S8	2.5 Hours	30 Min	75 Min
S9	2.5 Hours	40 Min	3.5 Hours
S10	2.5 Hours	40 Min	3.5 Hours
S12	3 Hours	45 Min	75 Min
S13	3 Hours	45 Min	75 Min
S15	2 Hours	40 Min	2 Hours
S16	2 Hours	40 Min	2 Hours
S17	2 Hours	40 Min	2 Hours
S19	2.5 Hours	45 Min	150 Min

California Exotic Novelties, LLC, declares that the following device complies with essential requirements and further relevant regulations of the 1995/5/EG guideline:

**Remote Control Toy**

CEN No. SE-4588-70-3, SE-4588-75-3 and SE-4588-80-3

A complete declaration of conformity can be obtained at: [www.calexotics.com/certificates.aspx](http://www.calexotics.com/certificates.aspx)

**CE 2200**

“Hereby, California Exotic Novelties declares that this Remote Control Toy is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.”